

Exceed SWEDEN

Electronic Postage Computing Scale

OPERATING MANUAL

CONTENTS

INTRODUCTION

- Specifications
- Preparing the scale for use
- Operating the Exceed postal scale

KEYBOARD FUNCTIONS

- Basic services
- Supplementary services
- Other keyboard functions

CHANGES IN POSTAL RATES

- Connecting the scale to your PC
- Using the application program to update the scale

INTRODUCTION

The Exceed Sweden Electronic Postage Computing Scale is an electronic compendium of postal services that incorporates and displays the cost of virtually all basic and supplementary postal services. It is graduated in 1 gram steps throughout its 5000 gram capacity and displays the weight of any item placed on its weighing platform together with the service(s) selected and total postage cost.

Specifications:

Capacity	: 5000 grams
Graduation/Resolution	: 1 gram steps
Accuracy	: +/- 0.5% or 1 gram (the greater of)
Power Supply	: Mains via 9 or 12 volt Mains Adapter
Power consumption	: Approx. 1.3 watts
Auto switch-off	: After approx. 5 minutes
Tare	: grams

Visit <http://www.elane.net/exceedpc/exceedsweden.htm> for complete scale specifications.


PREPARING THE SCALE FOR USE

- (i) Fit the weighing platform to the body of the scale via the location points, making sure that the platform opens toward the front (keyboard) end of the scale.
- (ii) Plug the mains adapter supplied with the scale into the mains and connect the adapter's output plug to the input socket at the rear of the scale.
- (iii) Place the scale on a firm level surface, switch on the mains supply and press the scale's "On/Off" key.
- (iv) The display will indicate (01) which stands for "Express Brev", 0g (zero grams)" and the minimum rate of postage.

OPERATING THE EXCEED POSTAL SCALE

The Exceed SWEDEN is easy to use and straightforward in operation. First establish which basic postal service you wish to use (e.g. Brev Postcenter, Express Brev, Företagspaket, etc.), then establish the DESTINATION (e.g. Europa, Övriga Länder,) and finally decide whether you wish to utilize any of the supplementary services (e.g. Rekommenderat, Värde, Postförskott etc.) and simply press the appropriate keys in turn. The display will guide you through, displaying the services selected and the total postage cost.

KEYBOARD FUNCTIONS

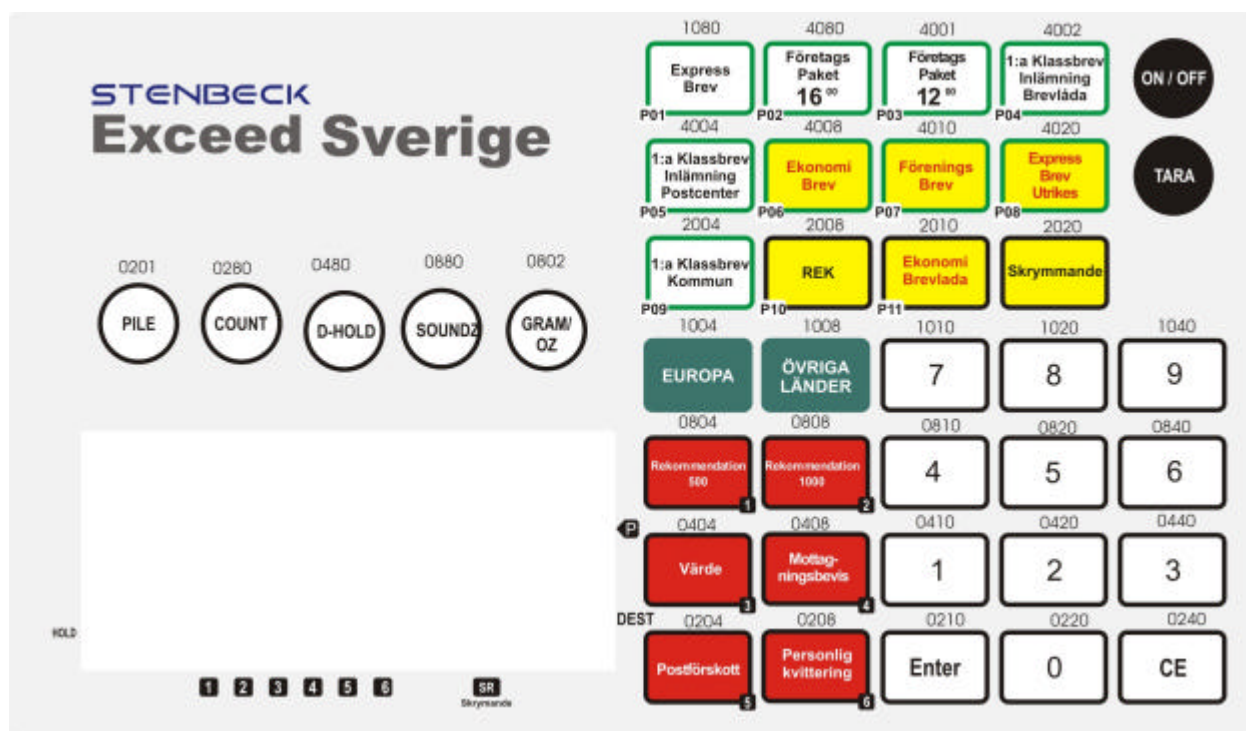

BASIC SERVICES

The following services are available in the Exceed Sweden. The two-digit number in the first line indicates the currently active service in the right side of the display. In the keyboard, each service is labeled with this number. The number in the second line represents several locations/destinations applicable to the basic services.

01) Express Brev

Press this key to set the service for domestic rates. For express brev outside Sweden select one of the destinations (**Europa or Övriga länder**) to display rates. This service may have supplementary services such as:

Domestic:

- Värde
- Mottagningsbevis (with subsequent service: Värde)

Europa or Övriga länder:

This service has no supplementary services.

02) Företagspaket 16⁰⁰

Pressing this key selects and displays the cost of Företagspaket at 16:00. This service may have supplementary services such as:

- a. Postförskott

03) Företagspaket 12⁰⁰

Pressing this key selects and displays the cost of Företagspaket at 12:00. This service may have supplementary services such as:

- a. Postförskott

04) 1:a Klassbrev Inlamning Brevlåda

Press this key to select and display the cost of Klassbrev Inlamning Brevlåda rates. Press **SKRYMMADE** to avail oversized service. This service may have supplementary services such as:

- a. Postförskott

05) 1:a Klassbrev Inlamning Postcenter

Pressing this key selects and displays the cost of domestic Klassbrev Inlamning Postcenter. For Klassbrev Inlamning Postcenter outside Sweden select one of the destinations (**Europa or Övriga länder**) to display rates. Press **SKRYMMADE** to avail oversized service. This service may have supplementary services such as:

Domestic:

- a. Postförskott

Europa or Övriga länder:

- a. Rekommendation (500 SEK or 10 000 SEK)
- b. Mottagningsbevis (with subsequent service: Rekommendation (500 SEK or 10 000 SEK))

06) Ekonomibrev

Press this key to select and display the cost of domestic Ekonomibrev Inlamning Postcenter. For Ekonomibrev Inlamning Postcenter outside Sweden select one of the destinations (**Europa or Övriga länder**) to display rates. Press **SKRYMMADE** to avail oversized service. This service may have supplementary services such as:

Domestic:

- a. Postförskott

Europa or Övriga länder:

This service has no supplementary services.

07) Föreningsbrev

Press this key to select and display the cost of Föreningsbrev. Press **SKRYMMADE** to avail oversized service. This service has no supplementary services

08) Express Brev Utrikes

Pressing this key selects and displays the cost of Express Brev rates where destination is in Europa. This service has no supplementary services.

09) 1:a Klassbrev Kommun

Pressing this key selects and displays the cost of 1:a-klassbrev inom kommun. Press **SKRYMMADE** to avail oversized service. This service has no supplementary services other than Postförskott.

10) Rek

Pressing this key selects and displays the cost of Rek service. This service has no supplementary services other than Mottagningsbevis.

11) Ekonomi Brevlåda

Pressing this key selects and displays the cost of Ekonomi Inlamning Brevlåda service. Press **SKRYMMADE** to avail oversized service. This service has no supplementary services other than Postförskott.

SUPPLEMENTARY SERVICES

1. Rekommendation (500 REK)

Press this key when you wish to add on the cost of Rekommendation(500 REK) to the available basic services. First press will add and display the corresponding rate of the specified service and is indicated by an arrow pointing **1** at the bottom of the display. Second press will disable the service.

2. Rekommendation (10 000 REK)

Press this key when you wish to add on the cost of Rekommendation(10 000 REK) to the available basic services. First press will add and display the corresponding rate of the specified service and is indicated by an arrow pointing **2** at the bottom of the display. Second press will disable the service.

3. Värde

Press this key when you wish to add on the cost of Värde to the available basic services. First press will add and display the corresponding rate of the specified service and is indicated by an arrow pointing **3** at the bottom of the display. Second press will disable the service.

4. Mottagningsbevis

Press this key when you wish to add on the cost of Ruckschein to the available basic services. First press will add and display the corresponding rate of the specified service and is indicated by an arrow pointing **4** at the bottom of the display. Second press will disable the service.

5. Postförskott

Press this key when you wish to add on the cost of Postförskott to the available basic services. First press will add and display the corresponding rate of the specified service and is indicated by an arrow pointing **5** at the bottom of the display. Second press will disable the service.

6. Personlig kvittering

No longer available.

Other Services:

○ **Europa**

Press this key when you wish to select destination within Europa. Second press will disable the service.

○ **Övriga länder**

Press this key when you wish to select destination outside Europa. Second press will disable the service.

○ **SKRYMMANDE**

Press to avail the oversized service. First press will display the corresponding rate is indicated by an arrow pointing **SR** at the bottom of the display. Second press will disable the service.

OTHER KEYBOARD FUNCTIONS

* **ON/OFF**

Pressing this key switch the scale on, pressing it again will switch it off.

* **TARA**

Press this key if you want to tare the weight (i.e. set it to zero) if a positive weight is displayed.

* **HOLD**

This key is useful for weighing large items when the LCD can no longer be seen while the object is on the platform. Press this key then put the item on the platform. A blinking arrow will point towards hold at the bottom of the display. Two short beeps will indicate that the weight is in memory. You can remove the item to view the LCD. The hold mode times out in 20 seconds. Press the CE key to reset the timer. Press the hold key again to exit the hold function.

* **ENTER**

Press this key when you have completed keying in a requested value in functions requiring user input.

* **CE (Clear Entry)**

Pressing this key will de-select any add-on services already selected (e.g. Värde, Postförskott etc). It exits from any user input or clears input when a certain value is keyed in. Also exits the Hold function.

* **COUNT function**

This key performs the counting function. To start counting, the scale must first put into memory the weight of each item. You can do this by placing a set number of items on the platform. Once the key is pressed, the user should enter the number of items on the platform. Confirm with the enter key.

After this initial setting, the scale will be in the 'counting mode'. The display will show the number of items on the first line of the display and the corresponding weight on the second line.

* **PILE function**

This key performs the pile function. It will display the weight of removed items from the platform

Put a bunch of things on the platform. Press the key. The display shows the total weight and then goes to zero. An arrow will blink to indicate it is now in the reverse weight mode. Once an item is removed, the weight of that item removed is displayed.

All items removed will undo pile function. To perform pile function again put a bunch of things on the platform then press the key.

To go back to basic service and cancel the pile function press **CE**.

* **Gram/oz**

This key selects the unit to be used. 1st press will select gram and 2nd press will select ounce.

* **SOUNDZ**

Press this key to turn on/off the beeping sound.

* **1** - It serves as the figure "1".

* **2** - It serves as the figure "2".

* **3** - It serves as the figure "3".

* **4** - It serves as the figure "4".

* **5** - It serves as the figure "5".

* **6** - It serves as the figure "6".

* **7** - It serves as the figure "7".

* **8** - It serves as the figure "8".

* **9** - It serves as the figure "9".

* **074568**

Press this key to turn on/off the LCD backlight.

DISPLAY

* **OVERLOAD "OL"**

This appears when the weight on the platform exceeds the scale's maximum capacity.

* **EXCESS WEIGHT "EE"**

There are some postal services whose weight limit is less than the limit of the scale. EE appears to indicate that the weight on the platform exceeds the weight allowed for that specific service.

ERROR DISPLAY

Err will display if the scale is started without the platform or with items placed on the platform.

If the scale keeps displaying "Err" even if the scale has been started without anything on the platform, please follow these instructions to fix the problem.

Turn off your scale and try putting the platform back to the scale or try removing the items placed on the scale's platform. Turn on your scale again. If this does not solve the **Err** display problem, you need to perform Auto Zero-Point calibration on your Exceed SWEDEN scale. Please follow these steps:

1. Remove any item placed on your scale's platform and turn on your scale.
2. When **Err** is displayed on the LCD, press **TARA** key on the keyboard. A cursor will blink on the scale's LCD.
3. Press **0** key and then press **Enter** key on the keyboard.
4. At this point, the scale is adjusting its zero point value. Wait for the scale to finish this process. After this, it will restart by itself. Exceed SWEDEN scale is now ready to use.

Note: This Auto Zero-Point calibration is only available to Exceed SWEDEN with software version 1.1 or higher. If the Err problem is not fixed by the above procedures, you need to update your scale with its latest software which can be found at: <http://www.elane.net/exceedpc/sweden/exceedsweden.htm>

Please read the following section for online software update procedures.

CHANGES IN POSTAL RATES

The Exceed SWEDEN scale is equipped with a RS232 interface to let you connect it to your personal computer and update the software easily whenever there is a postal rate or service change.

Any changes in postal rates, as well as in the services, can be easily implemented by purchasing the application program that will download the latest software version for the scale. This software version contains the latest postal rates and/or new postal services. The application program will automatically update the scale with the latest software version.

You can register your scale and get the latest application program or Exceed SWEDEN at <http://www.elane.net/exceedpc/sweden/swedenregistration.htm>.

Connecting the Scale to your PC

Connect the Exceed Sweden scale to your PC by using the RS-232 interface cable that comes with the scale. You can use any available serial port of your computer.

Using the PC Program to Update the Scale

The following is a summarized instruction on how to update your scale using the PC Program:

1. Make sure that you are connected to the Internet before running the PC Program. Close all other windows or programs until your scale is successfully updated.
2. Run PC Program and connect your scale to your computer via the RS-232 cable using any available serial port and turn it on.
3. PC Program will automatically detect which serial port in your computer your scale is connected to. Click the Continue button.
4. You may proceed updating your scale. If you purchased a software update, proceed to step 4.1. If you are updating using a discount code (for scales that are under warranty), proceed to step 4.2. You may also download the latest manual for your Exceed scale or view the help file or simulate some of the services that the scale offers.
 - 4.1. Click the Update Scale button. You will be asked to copy the link that was given after your successful payment for a scale update. Paste this link in the text box provided and click Continue. This link is important so that the PC Program can download the file necessary to update your scale. Proceed to step 5.
 - 4.2. Click Use Discount Code button. Enter the discount code on the textbox provided. If the code is correct, PC Program will download the file necessary to update your scale. Proceed to the next step.
5. After a successful file download, continue updating your scale.
6. Wait for a confirmation that your scale has been successfully updated with latest postage rates and/or services. Exceed Sweden scale will automatically restart after the update and is now ready to use with its latest postage rates and/or services.

Visit <http://www.elane.net/exceedpc/sweden/exceedsweden.htm> for more information.

Get the latest models of high quality scales at <http://www.elane.net>.

NOTE: You can download the PC Program and try some of the scale's functions even if you do not need to update the scale. It also has useful links for the maintenance of the scale.

CALIBRATING THE EXCEED AUSTRALIA SCALE – FOR ADVANCED USERS ONLY

In case the scale loses its accuracy, then remote calibration of the scale may be needed. The load cell of this precision scale is normally protected against overloaded weight applied slowly, but overload caused by dropping the scale or dropping something heavy on the scale may require re-calibration.

Remote Calibration of Scale

To run remote calibration on your scale, you need the following:

Remote Calibration Program – this is the application program that will help you perform remote calibration of your scale. You can download it from www.elane.net.

Remote Calibration Code – this is the code that is given after your payment for remote calibration service. This is important to continue with the remote calibration process.

Weight (if doing remote calibration using weights) – this will be used as a standard measure of weight during remote calibration. You may use one of the following:

1. A STANDARD WEIGHT between **1,250-5,000 grams** that is available on the market. This option requires you to enter the exact weight.
2. ANY WEIGHT between **1,250-5,000 grams**. This option requires you to enter the exact weight.
3. A WEIGHT using one of the PREDEFINED objects. Select an object from our list that you will be using for remote calibration. This option does not require you to enter the exact weight of the object.

Gravity Factor (if doing remote calibration by gravity factor adjustment) – we have listed major countries and locations for you to choose from. For best results, you can consult your local metrological station for your local gravity factor.

Exceed Scale – check that your scale is capable of remote calibration. Visit <http://www.elane.net/exceedpc/remotescales.htm> to view the list of scales that are capable of remote calibration.

These are the steps for remote calibration of your scale. It is important that you follow each instruction carefully to guarantee better and more precise calibration results.

1. Pay for the remote calibration service. Visit <http://www.elane.net/exceedpc/ordercalibration.htm>. After successful payment, copy the calibration code that is given. This code is also sent in the email you provided during payment and is valid for 48 hours after its first use.
2. Download and install Remote Calibration Program.
3. Run Remote Calibration Program and select your scale model. Connect the scale to any available serial port in your computer using the RS-232 cable. Turn on the scale and remove any object on it.
4. Enter your calibration code.
5. Select calibration method. You can choose remote calibration using weights or remote calibration by adjusting gravity factor. If using weights, make sure that you have the necessary weights, then proceed to step 6. If using gravity factor adjustment, proceed to step 7.
6. Give details about the object or weight that you will be using. You may enter the exact weight (in grams) of the object or choose from the list a predefined set of objects that you will be using as a standard weight. Proceed to step 8.
7. Give details of your current geographical location by selecting your country and city or location from the list. If your location is not on the list, select the country and location that is closest to yours. This process lets your scale “identify” the gravity factor associated with your present location. If you know this value, you may also choose to provide it in the program. You may contact your metrological station and ask for your local gravity factor. WARNING: Do not provide a value that you are not sure of as this may cause weight reading errors of your Exceed Scale.
8. Scale will be calibrated according to the value(s) that you provided. If you are using weights for remote calibration, wait for the step-by-step instruction on when to place weight on the scale. Check also the calibration status that is being displayed.
9. Wait for a confirmation of a successful remote calibration of your scale. After this, your scale will restart automatically and it is now calibrated according to the method that you chose.

For more information about remote calibration, please visit: <http://www.elane.net/exceedpc/remotecalibration.htm>.